


CLOTHES DRY TAKES TOO LONG

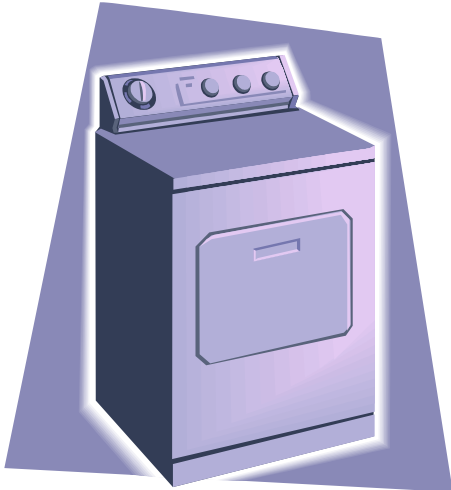

1. The most common reason for a dryer taking too long is that the filter/screen needs cleaning. It is important to clean the filter between each load as lint build up can be dangerous and cause a fire. Lint also stresses the equipment.
2. If the filter/screen is not cleaned or properly installed between loads lint may also build up in the vent line also.
3. If the Dryer is not working at all try checking the circuit breaker if it is electric or refer to “YOU SMELL GAS OR A GAS APPLIANCE, HOT WATER TANK OR FURNACE WILL NOT STAY LIT” if it is gas.
4. If you are still having problems notify CPM.