

DISHWASHER DOES NOT DRAIN OR LACKS POWWER



1. Usually lack of drainage is a result of a clogged garbage disposal as the dishwasher typically is routed through the disposal (See garbage disposal section).
2. If the power is not working, check to make sure the breaker is properly set again (see HOW TO RESET A BREAKER).
3. If the above does not work, notify CPM and report it. A dishwasher failure can only be taken care of during regular working hours.